



Tent Pitching Instructions – Killington 600 & 900

Flysheet 1st Pitching

- Assemble poles on ground.
- 11 poles: 3 long dome poles (black)
3 medium bedroom (blue)
3 short bedroom (red)
2 porch poles (grey)
- **The poles are colour coded to match corresponding pole sleeve entry points**
- Lay out the flysheet and insert the 3 long poles diagonally (across) through pole sleeves.
- Insert a blue and red pole through the pole sleeves across each bedroom area.
- **Assistance to lift the tent from inside is advisable to form the dome area to avoid undue stress on the poles.**
- Locate the pole ends on one side of the central dome area onto the correct pin-system.
- Push poles into arch from the opposite side and locate pole ends onto corresponding pin system.
- Locate the bedroom poles onto the pin system and push poles into arch, one at a time, from opposite side.
- Insert the porch poles into their sleeves, locate onto the pin system and push into an arch.
- The tent should now be almost free standing, reposition if required.
- Peg out the tent through the metal rings at the pole bases using pin pegs, ensuring that the groundsheet is correctly tensioned. Start with the central dome area, then peg the bedrooms. V pegs should be used to peg out the D rings.
- Peg the porch and tighten any tension straps.
- Using the plastic clips, attach the flysheet to the poles.
- Peg out **ALL** guy lines using alloy pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.
- The groundsheet can be lowered at the doors by pegging down the elastic loops.

INNER TENTS

- Open out inner tents inside flysheet and position doorways to correspond with the living area
- Starting from the rear corners of the inner tent, attach to the corresponding rings and buckles on the flysheet. The location of the rings and buckles is at the end corners of the flysheet and at the base of the poles.
- Suspend the inner tents by attaching the toggles through the eyelets on the sleeve on the inside of the flysheet. Do the rear first and work towards the living area.
- The inner tents are fitted with roof lining extensions which have toggles to link with the points on the fly roof.
- Attach the storage pocket in the porch using the toggles and rings.

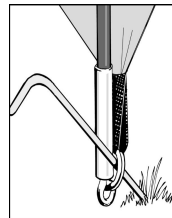


Figure 1.

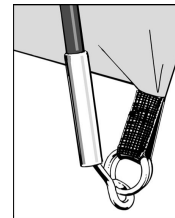


Figure 2.

Ring and Pin System.

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

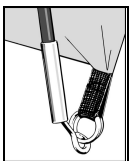


Figure 1.

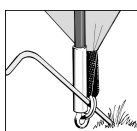


Figure 2.